

# Large Reverse Boost Valve & Sleeve


## K77898

- 1 Boost Valve
- 1 Boost Sleeve
- 2 O-Rings

Also Available:

### Throttle Boost Valve Kits

<b>77917-01K</b>	.423" dia.
<b>77917-471</b>	.471" dia.
<b>77917-500</b>	.500" dia.

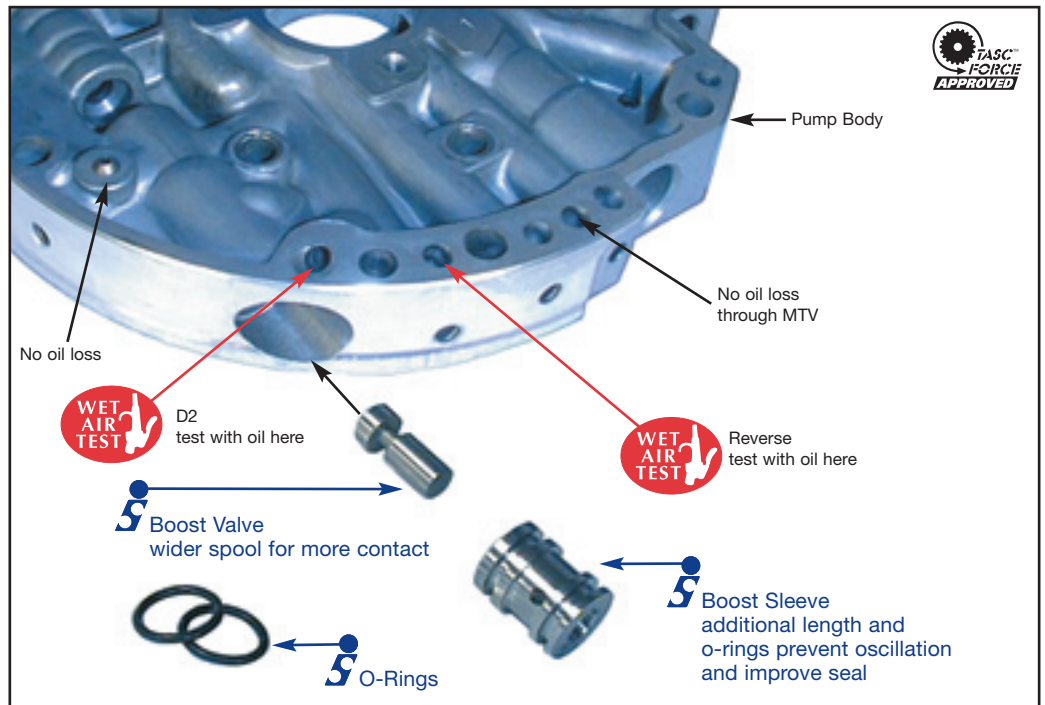

## Installation

1. Remove the worn reverse boost valve assembly and discard.
2. Place the two o-rings in the o-ring grooves on the replacement reverse boost sleeve.
3. Lubricate all replacement parts.
4. Install the replacement reverse boost valve assembly into the pump bore. To be sure of the proper sequence, refer to the illustration. Incorrect installation can result in soft 2-3 shifts, low line pressure, erratic shifts, and slipping in reverse.

