

Boost Valve Kit

Part No.

76990-04K


- Valve
- Sleeve

NOTE: Factory style sleeve, no O-rings.



NOTE: Large ratio valve for heavy duty and high performance applications (see chart below).

Ford AOD

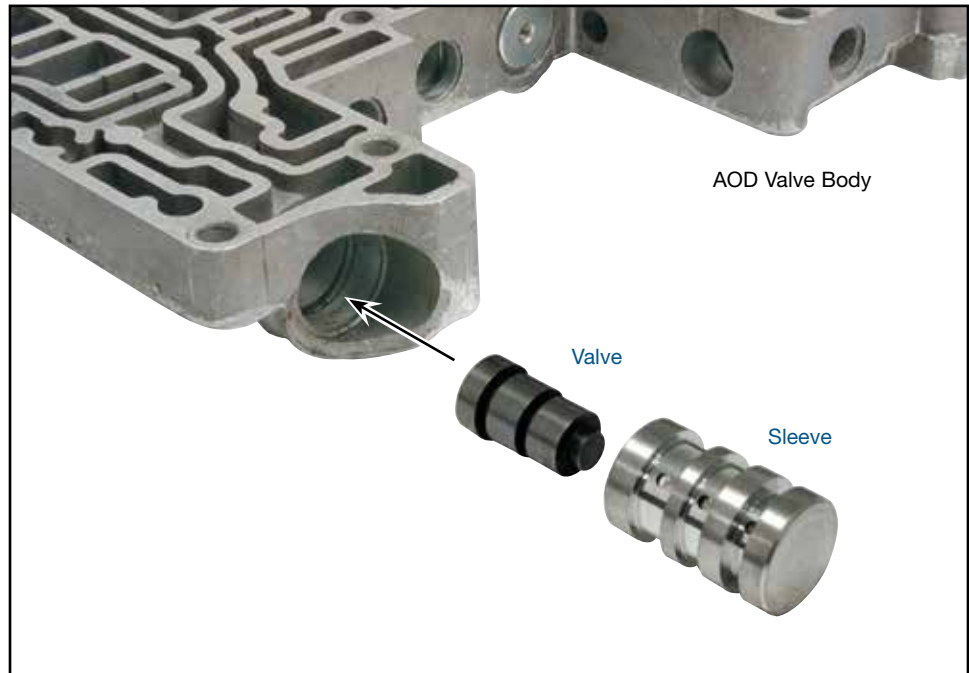

1. Disassembly

- Remove OE retaining clip and save for reuse.
- Remove OE boost valve and sleeve and discard.

2. Installation & Assembly

- Lubricate Sonnax valve and sleeve.
- Insert Sonnax boost valve into the boost sleeve, small end first.
- Install valve/sleeve assembly into the bore, just far enough to reinstall OE retaining clip to the sleeve groove.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

Boost Valve Ratios		
Part Numbers	Ratios	Great for these Applications
76990K & 76990-03K	.545" Spool Standard Ratio	Standard OE
76990-04K	.553" Spool Large Ratio	Large Ratio OE & High Performance

