





# 700-P

## Separator Plate Fits: 1982 to 93

**This plate fits all models.**  
87up gaskets [Aux VB type] work best.

Don't worry about extra holes, It's OK.  
If gaskets cover hole "C" cut gaskets to clear hole. If trans has auxiliary VB the gaskets must not cover AUX holes.

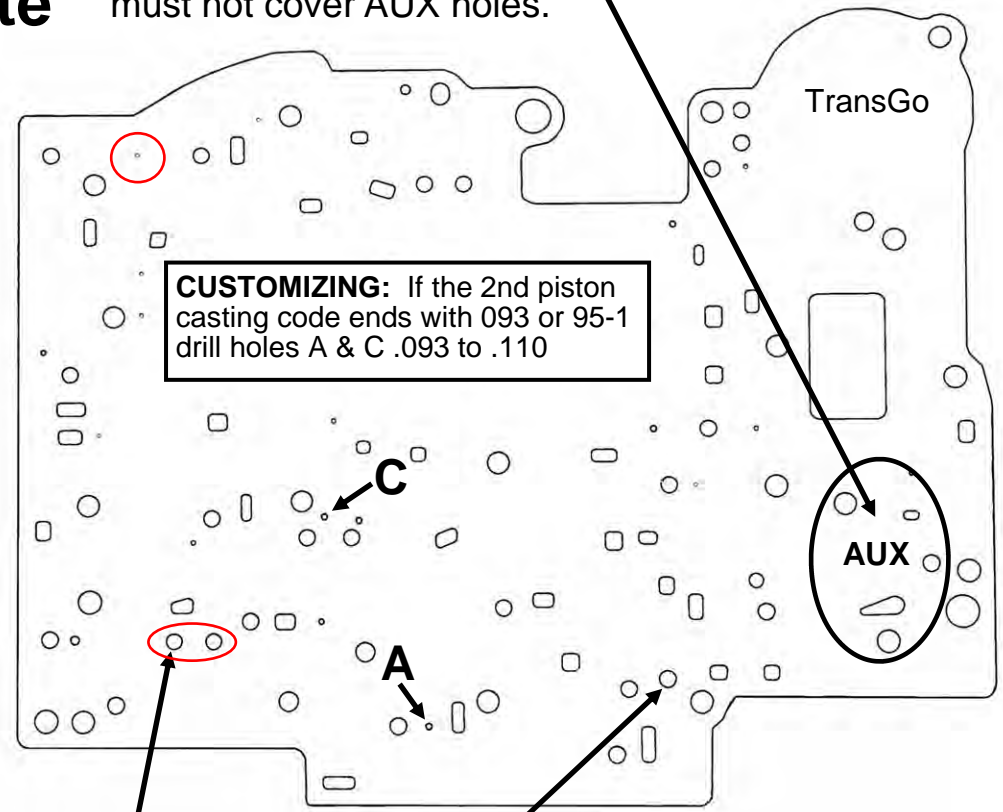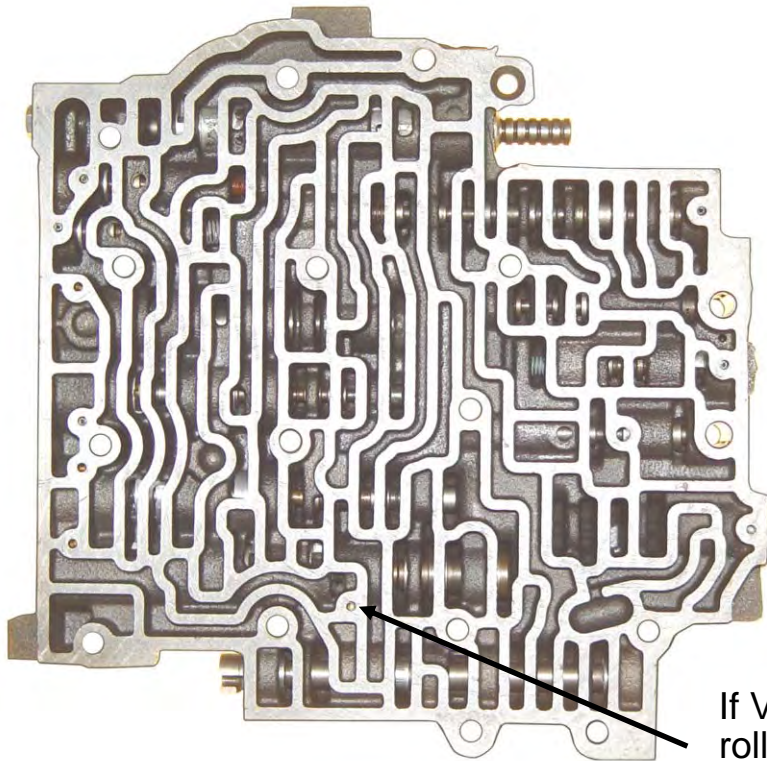

**CUSTOMIZING:** If the 2nd piston casting code ends with 093 or 95-1 drill holes A & C .093 to .110

If VB does not have roll pin here plug this hole with slug furnished.

If the Trans **HAS** auxiliary valve body, plug this hole with slug furnished.



*Very nice stuff.*

**When using a late CASE**  
To make a plate into an 87 plate, do not plug this hole when using an early 83-86 Type 1 VB and install ball in case bathtub.

**Installing slug in hole:** Put plate on cement floor with this side up. Insert slug into hole. Hit with light hammer several good whacks. That's it.